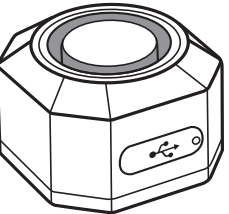
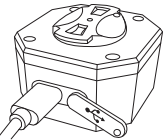
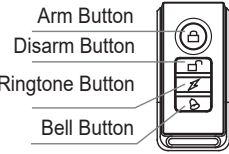
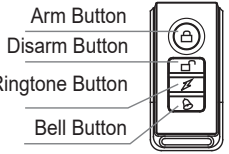
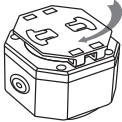
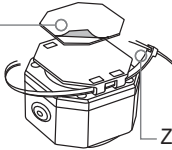
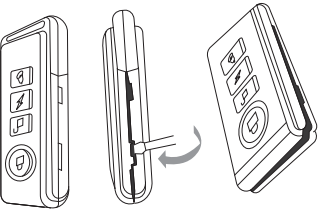


 GTBA2 QUICK START GUIDE  INCLUSIONS: Remote Controller, 2x Wireless Sirens, 2x Mounting Brackets, 2x Adhesive Pads, 2x Cable Ties, Allen Key, Product Manual and USB-C Cable (Charger not included).	Product Features • Designed to help secure your toolbox or storage unit. • Built-in rechargeable lithium battery – no need to replace batteries. • Energy-efficient design with long-lasting remote battery life. • Choose from 3 alert tones to help locate your toolbox or alert you to tampering. • Multiple mounting options: bracket, zip ties, or double-sided tape. • Loud 110dB alarm with car-grade, multi-tone alerts to deter theft. • Advanced motion sensor with smart algorithm reduces false alarms. • Adjustable sensitivity with 7 levels to suit different environments and surfaces. • Durable PC+ anti-UV casing – weatherproof, and resistant to extreme temperatures. 1	Product information Please ensure that you have read the product manual and instructions prior to installation and use. Failure to do so may result in the product incorrectly operating or an installation that renders the device unusable. For more information, videos and user guides on our GATOR range, visit our website, gatordriverassist.com or scan the following QR code:  gatordriverassist.com  2	Product instructions Before using the GTBA2 alarm, it's important to charge and test the unit. Step 1 – Charge the Alarm: • Use the included USB-C cable and a standard 5V power adapter (not included). • The red LED will light up while charging and turn off when fully charged. • Note: Fast chargers may not be compatible. Step 2 – Power On: • Once charged, the alarm is ready for use. • If the unit is unresponsive, ensure it's been charged for at least one minute to activate it. Step 3 – Check the Remote: • Press any button to confirm the remote LED lights up. • If it does not, replace the battery (see page 9 for battery info).  USB-C cable Insertion  Arm Button Disarm Button Ringtone Button Bell Button 3	Pairing the Alarm Your GTBA2 alarm and remote should come pre-paired. If not, or if you want to pair additional remotes or alarms, follow these steps: Pair a New Remote or Alarm: • Make sure the alarm is charged and disarmed. • Press and hold the Pair button on the alarm for about 3 seconds until you hear a "Beep". • Press any button on the remote. The alarm will emit multiple beeps to confirm successful pairing. Notes: • Only one remote can be paired at a time. • Repeat the above process to pair more remotes (up to 8). • The 9th remote will overwrite the first one. Reset All Pairings: ⚠ Warning: This will delete all remotes paired to the alarm. • Hold the Pair button for approximately 7 seconds. • After a single beep (pairing mode), continue holding until you hear three beeps. • All pairings will be erased.  Pairing button 4	Using the Alarm Arming the Alarm: • Press the [⏏] button on the remote. • The alarm will chime "Do-Re-Mi". • After 5 seconds, it will beep once to confirm it is armed. In armed mode: • First motion triggers a 2-second warning sound. • Continued motion within 2–12 seconds activates a 30-second alarm. Disarming the Alarm: • Press the [⏏] button. • You'll hear "Mi-Re-Do" to confirm disarming. Pressing [⏏] while the alarm is sounding will stop it. Locate Function (Bell): • Press [🔔] to play the selected ringtone and help you find your toolbox. Ringtone Selection: • While disarmed, press [🔔] to cycle through 3 different alarm tones.  Arm Button Disarm Button Ringtone Button Bell Button 5	Installation Methods You can install the GTBA2 alarm in a few different ways depending on your setup. Bracket Installation: • Attach the mounting bracket to the base of the siren. • Rotate the alarm unit into the bracket until it locks. • Attach the adhesive pad to the mounting bracket. • Securely press and hold the siren in position until adhesion is achieved. • Ensure the USB-C charging port faces downward to improve water resistance. Zip Tie Installation: • Use for additional security. • Loop the included zip ties through the mounting slots and secure tightly.  Rotate and lock  Zip ties Double-sided adhesive pad 6
Settings and Adjustments Sensitivity Adjustment: There are 7 levels, from most sensitive (Do) to least sensitive (Si). To adjust: • Disarm the alarm. • Hold [⏏] until the remote's LED light stays on. • Press [⏏] to cycle through levels – each tone corresponds to a sensitivity level. • Press [⏏] again to save and exit. Volume Adjustment: Three volume levels are available (default is the loudest). To adjust: • Disarm the alarm. • Hold [⏏] until the remote LED stays solid. • Press [🔔] to cycle through volume levels. • Press [⏏] to save and exit. If no buttons are pressed for 10 seconds, the alarm will automatically exit settings mode. 7	Charging and Battery Warnings Alarm Unit: • When battery is low, the alarm will sound a low-battery tone in addition to the arm/disarm tone. • Charge with the included USB-C cable and a 5V adapter (Not included). • Red light = charging; light off = fully charged. Remote Control: • If range is reduced or the LED is weak/not lighting, replace the battery. Battery Types: • Remote: 27A (12V) alkaline battery To Replace: • Use a small screwdriver to open the remote case. • Slide or pry the casing apart carefully. • Replace with a fresh battery, observing correct polarity. 8	How to replace battery for remote • Pry at the gap with a small flat screwdriver • Slides up & down then expand and open the remote  Note: 1. Please replace the batteries in strict accordance with the battery model requirements of the manual to avoid the risk of explosion. 2. Please place battery in a safe area and keep it away from the reachable area of children to avoid accidental ingestion of burns and lead to the risk of death. 9	Product Specifications • Alarm Battery: 3.7V 700mAh lithium • Working time: 1–3 months • Standby: Up to 6 months • Charging Port: USB-C (5V input) • Remote Battery: 27A (12V), lasts ~1–2 years • Wireless Frequency: 433.92 MHz (Japan: 426.0625 MHz) • Volume Output: 90–110 dB • Water/Dust Resistance: IP65 • Operating Temperature: -40°C to +70°C • Humidity Tolerance: <95% • Storage Temperature: -40°C to +70°C 10	Troubleshooting Remote not working? • Check the remote battery. Replace if weak or dead. • Make sure the alarm is charged – charge for at least 1 minute to activate. • Re-pair the alarm and remote if needed (see page 4). Alarm is quiet or not responding? • Avoid installing the unit in fully enclosed metal areas – this can block wireless signals and reduce volume. • Check installation stability – loose mounts can interfere with motion detection. No lights or sounds at all? • Confirm proper charging cable and adapter are used. • Try charging for 10+ minutes and test again. 11	Technical assistance If you need assistance setting up or using your Gator product now or in the future, call Gator Support. Australia TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST or EMAIL: service@tdj.com.au Please retain this user guide for future reference. If you would like to download a digital copy of this manual, or other Gator manuals/software, please visit the gatordriverassist.com website and click on 'Firmware & Manuals' or search for the product model number for more information, accessories and products. This manual is considered correct at time of printing but is subject to change. For latest manuals and updates refer to the website. Copyright © 2025 by TDJ Australia All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author. 12	2025.09